

PRO 95\_TURBO FLEXI

PRO 85\_FLEXI

# Vaporetto®

## MANUALE DI ISTRUZIONI

INSTRUCTION MANUAL      MANUAL DE INSTRUCCIONES  
MANUEL D'INSTRUCTIONS    BEDIENUNGSANLEITUNG

MANUAL DE INSTRUÇÕES

**REGISTRA IL TUO PRODOTTO**  
**REGISTER YOUR PRODUCT**  
**ENREGISTREZ VOTRE PRODUIT**  
**REGISTRA TU PRODUCTO**  
**GERÄTREGISTRIERUNG**  
**REGISTRE O SEU PRODUTO**  
[www.polti.com](http://www.polti.com)

 **POLTI®**  
NATURAL HOME FEELING

**PRO 95\_TURBO FLEXI****PRO 85\_FLEXI**

**ANTICALCARE NATURALE**  
 NATURAL ANTI-LIMESCALE  
 FORMULA ANTI-CALCAIRE NATUREL  
 ANTICAL NATURAL  
 NATÜRLICHER KALKLÖSER  
 ANTICÁLCARIO NATURAL

**GUARNIZIONI DI RICAMBIO**

SPARE SEALS  
 JOINTS DE RECHANGE  
 JUNTAS DE RECAMBIO  
 ERSATZDICHTUNGEN  
 GUARNIÇÕES DE SUBSTITUIÇÃO

**SPAZZOLA PICCOLA**

SMALL BRUSH  
 PETITE BROSSE  
 CEPILLO PEQUEÑO  
 KLEINE BÜRSTE  
 ESCOVA PEQUENA

**TUBI PROLUNGA**


EXTENSION TUBES  
 TUBES DE RALLONGE  
 TUBOS ALARGADORES  
 VERLÄNGERUNGSRÖHRE  
 TUBOS EXTENSÃO

**VAPORFLEXI SPAZZOLA PER PAVIMENTI**

VAPORFLEXI BRUSH FOR FLOORS  
 VAPORFLEXI BROSSE POUR SOLS  
 VAPORFLEXI CEPILLO PARA SUELOS  
 VAPORFLEXI FUSSBODENBÜRSTE  
 VAPORFLEXI ESCOVA PARA PAVIMENTOS

**N. 2 PANNI PER SPAZZOLA VAPORFLEXI**

N. 2 CLOTHS FOR VAPORFLEXI BRUSH  
 N. 2 CHIFFONS POUR BROSSE VAPORFLEXI  
 N. 2 PAÑOS PARA CEPILLO VAPORFLEXI  
 N. 2 VAPORFLEXI BÜRSTENTÜCHER  
 N. 2 PANOS PARA ESCOVA VAPORFLEXI

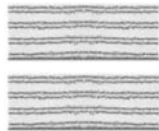**TELAIO PER TAPPETI E MOQUETTE**

FRAME FOR FLOOR BRUSH  
 CHÂSSIS POUR BROSSE POUR SOLS  
 CHASIS PARA CEPILLO DE SUELOS  
 RAHMEN FÜR FUSSBODENBÜRSTE  
 ESTRUTURA PARA ESCOVA PAVIMENTOS

**ACCESSORIO CONCENTRATORE c/SPAZZOLINO**

CONCENTRATOR ACCESSORY w/BRUSH  
 ACCESSOIRE CONCENTRATEUR AVEC PETITE BROSSE  
 ACCESORIOS CONCENTRADOR CON CEPILLO  
 KONZENTRIER-ZUBEHÖR MIT KLEINER BÜRSTE  
 ACESSÓRIO CONCENTRADOR COM ESCOVINHA

**only PRO 95\_TURBO FLEXI**

**TUBO FLESSIBILE VAPORE ESTRAIBILE**  
 FLEXIBLE REMOVABLE STEAM HOSETUBE  
 FLEXIBLE VAPEUR EXTRACTIBLETUBO  
 FLEXIBLE VAPOR EXTRAÍBLE  
 ABNEHMBARER DAMPFSCHLAUCH  
 TUBO FLEXÍVEL VAPOR EXTRAÍVEL

**only PRO 95\_TURBO FLEXI**

**LAVAVETRI**  
 WINDOW CLEANER  
 LAVE-VITRES  
 LIMPIACRISTALES  
 WASSERABZIEHER  
 LIMPA-VIDROS

**only PRO 95\_TURBO FLEXI**

**LANCIA VAPORE**  
 STEAM NOZZLE  
 LANCIA VAPEUR  
 BOQUILLA VAPOR  
 DAMPFDÜSE  
 LANÇA VAPOR

**only PRO 95\_TURBO FLEXI**

**SPAZZOLINO c/SETOLE OTTONE**  
 SMALL BRUSH w/ BRASS BRISTLES  
 PETITE BROSSE a/SOIES EN LAITON  
 CEPILLO c/CERDAS DE LATÓN  
 KLEINE BÜRSTE MIT MESSINGBORSTEN  
 ESCOVINHA c/CERDAS LATÃO

**N. 2 Pz. only PRO 95\_TURBO FLEXI****N. 1 Pz. only PRO 85\_FLEXI**

**CUFFIA**  
 CAP  
 BONNETTE  
 FUNDA  
 HAUBE  
 PROTEÇÃO

**only PRO 95\_TURBO FLEXI**

**SET 3 SPAZZOLINI COLORATI**  
 SET 3 OF COLOURED BRUSHES  
 KIT 3 BROSSES COLORÉES  
 SET 3 CEPILLOS DE COLORES  
 SATZ 3 KLEINE FARBIGE BÜRSTEN  
 KIT 3 ESCOVINHAS COLORIDAS




**only PRO 85\_FLEXI**

**SPAZZOLINO COLORATO**  
 SMALL COLOURED BRUSH  
 PETITE BROSSE COLORÉE  
 CEPILLO DE COLORES  
 BUNTE KLEINE BÜRSTE  
 ESCOVINHA COLORIDA

**only PRO 85\_FLEXI**


**LAVAVETRI MANUALE**  
 MANUAL WINDOW CLEANER  
 LAVE-VITRES MANUEL  
 LIMPIACRISTALES MANUAL  
 MANUELLER FENSTERREINIGER  
 LAVA-VIDROS MANUAL



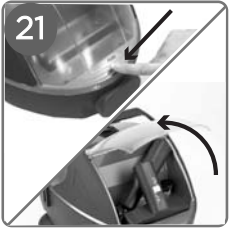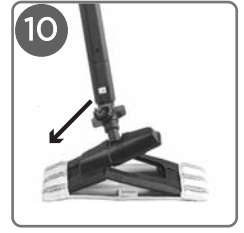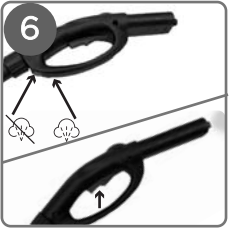

## OPTIONAL

PAEU0340

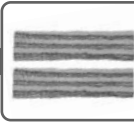

**KIT 2 PANNI PER SPAZZOLA VAPORFLEXI**  
 KIT WITH 2 CLOTHS for VAPORFLEXI BRUSH  
 KIT 2 CHIFFONS POUR BROSSE VAPORFLEXI  
 KIT 2 PAÑOS PARA CEPILLO VAPORFLEXI  
 SET 2 VAPORFLEXI BÜRSTENTÜCHER  
 KIT 2 PANOS PARA ESCOVA VAPORFLEXI

PAEU0231




**KIT 2 PANNI MICROFIBRA PER USO MANUALE**  
 KIT WITH 2 MICROFIBRE CLOTHS FOR MANUAL USE  
 KIT 2 CHIFFONS MICROFIBRE POUR UTILISATION MANUELLE  
 KIT 2 PAÑOS DE MICROFIBRA PARA USO MANUAL  
 SET 2 MIKROFASERTÜCHER FÜR MANUELLEN GEBRAUCH  
 KIT 2 PANOS MICROFIBRA PARA USO MANUAL

PAEU0318



**KIT 2 CUFFIE**  
 KIT 2 CAPS  
 KIT 2 BONNETTES  
 KIT 2 FUNDAS  
 KIT 2 HAUBEN  
 KIT 2 PROTEÇÕES

PAEU0221

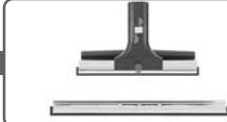

**ACCESSORIO LAVAVETRI**  
 WINDOW CLEANER ACCESSORY  
 ACCESSOIRE LAVE-VITRES  
 ACCESORIOS LIMPIACRISTALES  
 FENSTERREINIGUNGSZUBEHÖR  
 ACESSÓRIO LIMPA-VIDROS

PAEU0228



**ACCESSORIO TAPPEZZERIA**  
 WALLPAPER STRIPPER  
 DÉCOLLEUSE À PAPIERS PEINTS  
 ACCESORIO DESPEGA-PAPELES  
 TAPETENABLOESER  
 ACESSÓRIO DESPREGA PAPEL

PAEU0236



**LANCIA PRESSIONE**  
 HIGH PRESSURE LANCE  
 LANCE DE LA PRESSION  
 LANZA DE PRESIÓN  
 DAMPFLANZE  
 LANÇA PRESSÃO

PAEU0237










**SPAZZOLA TRIANGOLARE**  
 TRIANGULAR BRUSH  
 BROSSE TRIANGULAIRE  
 CEPILLO TRIANGULAR  
 DREIECKIGE BÜRSTE  
 ESCOVA TRIANGULAR

PAEU0283



**ACCESSORIO CONCENTRATORE c/SPAZZOLINO**  
 CONCENTRATOR ACCESSORY w/BRUSH  
 ACCESSOIRE CONCENTRATEUR AVEC PETITE BROSSE  
 ACCESORIOS CONCENTRADOR CON CEPILLO  
 KONZENTRIER-ZUBEHÖR MIT KLEINER BÜRSTE  
 ACESSÓRIO CONCENTRADOR COM ESCOVINHA

PAEU0094		<p><b>Kalstop</b>  <b>ANTICALCARE NATURALE</b>          NATURAL ANTI-LIMESCALE          FORMULA ANTI-CALCAIRE NATUREL          ANTICAL NATURAL          NATÜRLICHER KALKLÖSER          ANTICÁLCARIO NATURAL</p>
PAEU0250		<p><b>KIT 3 SPAZZOLINI c/SETOLE NYLON</b>          KIT 3 BRUSHES w/ NYLON BRISTLES          KIT 3 PETITES BROSSES a/SOIES EN NYLON          KIT 3 CEPILLOS c/CERDAS DE NYLON          KIT 3 KLEINE BÜRSTEN MIT NYLONBORSTEN          KIT 3 ESCOVAS COM CERDAS NYLON</p>
PAEU0296		<p><b>KIT 3 SPAZZOLINI COLORATI c/SETOLE NYLON</b>          KIT 3 COLOURED BRUSHES w/ NYLON BRISTLES          KIT 3 PETITES BROSSES COLORÉES a/SOIES EN NYLON          KIT 3 CEPILLOS DE COLORES c/CERDAS DE NYLON          KIT 3 BUNTE KLEINE BÜRSTEN MIT NYLONBORSTEN          KIT 3 ESCOVAS COLORIDAS COM CERDAS NYLON</p>
PAEU0297		<p><b>KIT 3 SPAZZOLINI c/SETOLE OTTONE</b>          KIT BRUSHES w/ BRASS BRISTLES          KIT 3 PETITES BROSSES a/SOIES EN LAITON          KIT 3 CEPILLOS c/CERDAS DE LATÓN          KIT 3 KLEINE BÜRSTEN MIT MESSINGBORSTEN          KIT 3 ESCOVAS COLORIDAS COM CERDAS BRONZE</p>
PFEU0013	<p>only PRO95_TURBO FLEXI</p> 	<p><b>FERRO DA STIRO ACCESSORIO</b>          IRON ACCESSORY          FER À REPASSER ACCESSOIRE          PLANCHA ACCESORIO          BÜGELEISEN ZUBEHÖR          FERRO DE ENGOMAR PROFISSIONAL</p>
PAEU0197	<p>only PRO95_TURBO FLEXI</p> 	<p><b>STEAM DISINFECTOR</b></p>
PAEU0263	<p>only PRO95_TURBO FLEXI</p> 	<p><b>STEAM MOP</b></p>

Gli accessori optional sono disponibili all'acquisto nei migliori negozi di elettrodomestici, nei Centri Assistenza autorizzati e sul sito [www.polti.com](http://www.polti.com).  
 The optional accessories are on sale at all the best domestic appliance retailers, an Authorised Polti Service Centre or online at [www.polti.com](http://www.polti.com).  
 Les accessoires en option sont disponibles dans les meilleurs magasins d'appareils électroménagers, un SAV agréé ou sur le site [www.polti.com](http://www.polti.com).  
 Los accesorios opcionales están en venta en las mejores tiendas de electrodomésticos, Centros de Asistencia Autorizadoo en la página web [www.polti.com](http://www.polti.com).  
 Die optionalen Zubehörteile sind in gut geführten Haushaltsgeschäften, bei den Autorisierten Kundendienstcenter oder auf [www.polti.com](http://www.polti.com) erhältlich.  
 Os acessórios opcionais estão disponíveis para compra nas melhores lojas de eletrodomésticos, um dos Centros de Assistência Autorizados ou no site [www.polti.com](http://www.polti.com).

# WELCOME TO THE WORLD OF VAPORETTO

THE CLEANING SYSTEM THAT CLEANS ALL SURFACES OF THE HOME. SANITISING WITH STEAM, IT KILLS 99.99% OF GERMS AND BACTERIA AND REMOVES THEM WITHOUT THE USE OF CHEMICAL DETERGENTS.



## ACCESSORIES FOR ALL NEEDS

On our web site [www.polti.com](http://www.polti.com) and in good appliance shops you will find a wide range of accessories to increase the performance and the practical applications of your appliances to make home cleaning even easier.

To check the compatibility of an accessory with your appliance, search the code PAEUXXXX/PFEUXXXX listed next to each accessory on page 4-5.

If the accessory code you wish to buy is not listed in this manual, please contact our Customer Service team for more information.



## REGISTER YOUR PRODUCT

Visit our website [www.polti.com](http://www.polti.com) or call our Customer Services department to register your product.

You can benefit from a special welcome offer, in participating countries, and keep up to date on all the latest Polti news, as well as buy accessories and consumables.

To register your product, in addition to your personal information, you must enter the serial number (SN) which you will find on the silver label, located on the box and underneath the appliance.

To save time and have your serial number to hand, write it in the space provided on the back cover of this manual.



## OFFICIAL YOUTUBE CHANNEL

Want to know more? Visit our official channel: [www.youtube.com/poltispa](http://www.youtube.com/poltispa). Search the illustrative video for Vaporetto in order to see a quick and easy overview of all the features of this amazing appliance.

In addition, the video guide will lead you through use of the Vaporetto from preparation for use to simple maintenance operations.

Sign up to the official channel to keep yourself updated about our video contents!

**ATTENTION:** The safety warnings are only indicated on this manual.

## SAFETY WARNINGS

### IMPORTANT PRECAUTIONS FOR USE



WARNING! BEFORE USING THE APPLIANCE, CAREFULLY READ ALL THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL, AND ON THE APPLIANCE ITSELF.

Polti S.p.A. accepts no liability for any accident deriving from any improper use of this appliance.

Correct use of the product is only as detailed in this instruction manual.

Any use which does not comply with these instructions will invalidate the warranty.

### SAFETY SYMBOLS:



WARNING: High temperature. Risk of scalding!

If shown on the product, do not touch as parts may be very hot.



WARNING: Steam. Risk of scalding!

This appliance reaches very high temperatures. Incorrect use of the device can cause scalding.

- Never disassemble or carry out maintenance on the appliance apart from that indicated in this manual. In the event of a fault or malfunction, do not try to repair

the appliance yourself. Incorrect use or a lack of respect for the instructions herein may lead to serious accidents. Always contact Authorised Service Centres.

- This appliance must not be used if it has been dropped, if there are visible signs of damage or if it leaks.
  - To carry out any maintenance or cleaning requiring access to the boiler, ensure that the appliance is switched off at the power switch and disconnected from the mains for at least two hours.
  - This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must be supervised to ensure they do not play with the appliance.
  - Keep the appliance out of reach of children when it is energized or cooling down.
  - Keep all packaging out of the reach of children; it is not toy. Keep the plastic bag out of the reach of children to avoid risk of suffocation.
  - This appliance is intended exclusively for indoor domestic use.
- In order to reduce the risk of accidents, including: fires, electrocution, personal injury and scalding, both during use and during preparation, maintenance and storage, always take the basic precautions listed in this manual.**

## RISKS CONNECTED TO THE POWER SUPPLY - ELECTROCUTION

- The earthing system and highly sensitive residual-current circuit breaker, complete with magnetothermic cut-out for your domestic system, guarantee safe use of electrical appliances. Therefore, for your own safety, check that the electrical system to which the appliance is connected complies with current laws.
- Do not connect the appliance to the mains if the voltage does not correspond with that of the domestic electrical circuit in use.
- Do not overload sockets with adaptors and/or transformers. Only connect the product to a single socket with current that is compatible with the supplied plug.
- Do not use electrical extension leads that are unsuitable for the power rating or which are not compliant with law. They may overheat and possibly lead to short circuiting, fire, power outage or damage to the equipment. Only use extension leads which are certified, suitable for the power rating, supporting 16A and earthed.
- Always turn the appliance off at the ON/OFF switch before unplugging it.
- To remove the plug from the socket, do not pull the power cable, but hold the plug itself to avoid damage to the plug and the cable.
- Plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
- The appliance must not be left unattended if plugged in to the mains.
- Fully unwind the cable from the cable winder before connecting the appliance to the mains and before use. Always use the product with the cable completely unwound.
- Do not pull or jerk the cable or expose it to stress (twisting, crushing or stretching). Keep the cable away from hot and/or sharp surfaces and elements. Avoid trapping the cables in doors and windows. Do not pull the cable tightly around corners. Avoid treading on the cable. Do not pass over the cable with the appliance. Do not wind the power cable around the appliance, especially if the appliance is hot.
- Do not change the plug on the power cable.
- If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid all possible hazards. Do not use the product if the power cable is damaged.
- Do not touch or use the appliance barefoot and/or with wet body or feet.
- Do not use the appliance near containers full of water, e.g. sinks, baths and swimming pools.
- Never immerse the cleaner in water or other fluid.
- A hazard may occur if the appliance



runs over the supply cord.

- Steam must not be directed towards equipment containing electrical components, such as the interior of ovens.

#### RISKS DURING USE OF THE PRODUCT - INJURIES/SCALDING

- The product should not be used in areas where there is a danger of explosions or in the presence of toxic substances.
- Do not pour toxic substances, acids, solvents, detergents, corrosive substances and/or explosives or perfumes into the boiler.
- Only pour water or the water mix indicated in the section "WHICH WATER TO USE" into the boiler.
- Do not direct the steam jet onto toxic substances, acids, solvents, detergents or corrosive substances. The handling and removal of dangerous substances must be carried out according to the instructions of the manufacturers of these substances.
- Do not direct the steam jet onto explosive powders or liquids, hydrocarbons, open flames and or extremely hot objects.
- Re-wind the cable when the appliance is not in use.
- Use the special carry handle for transport. Do not pull the power cable. Do not use the power cable as a handle. Do not lift the appliance using the power cable or the steam hoses/vacuum tubes.
- Do not position the product near sources of heat such as fireplaces, stoves

and ovens.

- Do not obstruct the openings and grills on the product.
- Do not direct the steam jet on to any part of the body of people or animals.
- Do not direct the steam jet on to clothes while they are being worn.
- Cloths and fabrics and fabrics which have been subjected to a deep steam reach very high temperatures, above 100°C. Wait a few minutes and check that they have cooled before handling them. Therefore, avoid contact with the skin if they have just been steamed.
- During use, keep the product in a horizontal position on stable surfaces.
- The steam lock on the handle guarantees greater safety, as it prevents the accidental activation of steam delivery by children or people who are unaware of the function of the appliance. When steam is not being used, engage the steam lock.

To continue steam delivery, return the switch to its original position.

## CORRECT USE OF THE PRODUCT

This appliance is intended for internal domestic use as a steam cleaner, in accordance with the descriptions and instructions contained in this manual. Please read these instructions carefully and keep them. If this manual is lost, it can be consulted and/or downloaded from the website [www.polti.com](http://www.polti.com). Never leave the appliance exposed to weathering.

Correct use of the product is only as detailed in this instruction manual. Any other use may damage the appliance and invalidate the warranty.

Tests performed by a third party, independent laboratory certify that Vaporetto kills and removes 99.99% of germs and bacteria if used based on the instructions included in this manual with the microfibre cloth mounted and for a continuous operating time of 15 seconds.

## INFORMATION FOR USERS

Pursuant to European Directive 2012/19/EU, regarding electric and electronic appliances, this appliance must not be disposed of with domestic waste, but should be sent to an official collection facility. This appliance complies with EU Directive 2011/65/EU.



The crossed-out bin symbol on the appliance indicates that, at the end of its useful lifespan, the product must be disposed of separately from other waste.

Therefore, at the end of its life, the user must hand over the appliance to an appropriate collection centre for electric and electronic waste. Proper separate waste collection to facilitate the subsequent recycling, treatment and environmentally compatible disposal of the appliance helps to prevent negative effects on the environment and human health, and promotes recycling of the materials the product is made of. Unlawful disposal by the owner may result in the sanctions envisaged by current legislation.

Polti S.p.A. reserves the right to change equipment or accessory specification without prior notice.

Before leaving our factory all our products are rigorously tested. This is the reason why your VAPORETTO may contain some residual water in the boiler.

## WHICH WATER TO USE IN THE BOILER

This appliance has been designed to function with normal tap water between 8°F and 20°F. If the tap water contains a lot of limescale use a mix composed of 50% tap water and 50% demineralised water which is widely available to purchase. Do not use pure demineralised water.

**Warning: check the hardness of the water at the technical office at your local council or the local water supplier.**

If you only use tap water, you can reduce the formation of limescale by using the special **Kalstop (PAEU0094)** anti-limescale product, distributed by Polti, and available for sale at all major domestic-appliance stores and online at [www.polti.com](http://www.polti.com).

Never use distilled water, rain water or water containing additives (e.g. starch, perfumes), or water produced by other domestic appliances, by water softeners or filter jugs. Do not add chemical, natural, detergent, or limescale removing substances, etc.

## 1. PREPARATION FOR USE

1.1 Open the tank closing cap (1) and fill the tank with about 1l of water, making sure that it does not overflow.

This operation must always be carried out when the boiler has cooled and with the power cable disconnected from the mains. Thanks to the continuous refill system you do not need to stop and wait for the appliance to cool down because the tank can be filled as needed.

1.2 Replace the tank closing cap.

1.3 **For the Pro95\_Turbo Flexi model** open the flap of the built-in socket and insert the connector of the steam hose (2), pressing the specific button and making sure that the hooking pin is inserted perfectly in the specific locking hole on the socket.

1.4 Connect the cable plug to an earthed power supply of the correct voltage (3).

Completely unwind the power cable before plugging it into the mains and before use, and always use the appliance with the power cable completely unwound.

1.5 Press the boiler switch (4) which will light up together with the "steam ready" indicator light (5).

1.6 Wait for the "ready steam" indicator light (5) to turn off.

The appliance is ready for use.

1.7 Before starting the steam cleaning, you are advised to sweep or vacuum the surface to be cleaned.

**WARNING: When first operating steam, there may be some drops of water mixed with the steam due to temperature imbalances.**

**Direct the first jet of steam onto a cloth.**

## 2. CONNECTION OF ACCESSORIES

All Vaporetto accessories can be connected directly to the handle of the steam hose or extension tubes as follows:

- Move the locking button on the accessory to the OPEN position (7).
- Attach the required accessory to the hand gun or to the extension tube.
- Move the locking button back to the CLOSED position (7).
- Check that the locking button has engaged and the accessory is fully connected.


## 3. STEAM ADJUSTMENT

You can optimise the steam flow by means of the steam adjustment knob (5). To increase the flow, turn the knob clockwise. Turning anti-clockwise reduces the flow. Here are some tips for regulating it:

- **Maximum level:** to remove encrustation, stains, grease and to sanitise;
- **Medium level:** for carpets, rugs, glass and floors;
- **Minimum level:** to steam plants, clean delicate fabrics, wall coverings, sofas, etc.

#### 4. CLEANING FLOORS

Before using the appliance on delicate surfaces, ensure that the part in contact with the surface is free from foreign bodies that could cause scratches.

- 4.1 Make sure that section 1 has been followed and connect the accessories as indicated in section 2.
- 4.2 Connect the extension tubes to the steam hose and the floor brush to the extension tubes.
- 4.3 Release the floor brush by placing a foot on the  (8) and pulling up.
- 4.4 Attach the cloth included to the Vaporflexi floor brush by inserting one end of the floor brush into the pocket of the cloth (9), then insert the second end of the brush into the second pocket of the cloth (10).
- 4.5 With the extension tubes push the floor brush downward in order to lock it (11), possibly using a foot.
- 4.6 Adjust the intensity of the steam by turning the adjustment knob (5); for this type of surface we recommend **Medium level** steam (5).
- 4.7 Deactivate the steam lock (6) and continue with steam delivery, pressing the steam trigger on the handle of the steam hose (6).
- 4.8 Clean the floors by moving the brush.
- The brush includes a small brush which is ideal for removing the most stubborn stains. To use, turn the small brush (12), then tilt the extension tubes so that the bristles touch the floor and loosen the dirt (13-14).
- At the end of the cleaning operations, the cloth can be removed by pressing with a foot on the special symbol and pulling the extension tubes upwards to release and open the brush.

Before removing the cloth from the brush, wait a few minutes to allow the cloth to cool.

**WARNING:** Do not use the appliance without the cloth.

**WARNING:** For additional safety, test steam delivery on a hidden area leave the steamed area to dry to ensure that no changes in colour or deformations have occurred.

#### 5. CLEANING RUGS AND CARPETS

**WARNING:** Before cleaning fabrics with steam, consult the manufacturer's instructions and always carry out a test on a hidden area or on a sample of the material. Allow the steamed area to dry to make sure that no changes in colour or deformations have occurred.

5.1 Make sure that section 1 has been followed and connect the accessories as indicated in section 2.


5.2 Connect the extension tubes to the steam hose and the floor brush to the extension tubes.

5.3 Place the cloth in the frame (15). Then insert the Vaporflexi floor brush in the cloth placed in the frame, continuing as described in Point 4.4.

5.4 With the extension tubes push the floor brush downward in order to lock it (11), possibly using a foot.

5.5 Adjust the intensity of the steam by turning the adjustment knob (5); for this type of surface we recommend **Medium level** of steam.

5.6 Deactivate the steam lock (6) and continue with steam delivery, pressing the steam trigger on the handle of the steam hose (6).

5.7 Run the brush over the surface moving it backward and forward (16). At the end of the cleaning operations, the cloth and the frame can be removed by pressing with a foot on the special symbol  (8) and pulling the extension tubes upwards to release and open the brush.

Before removing the cloth from the brush, wait a few minutes to allow the cloth to cool.

#### 6. CLEANING GLASS, WINDOWS AND TILES

**WARNING:** To clean glass surfaces during cold weather, preheat the windows starting to vacuum from a distance of about 50 cm from the surface.

6.1 Make sure that section 1 has been followed and connect the accessories as indicated in section 2.

6.2 Adjust the intensity of the steam by turning the adjustment knob (5); for this type of surface we recommend **Medium level** of steam.

6.3 Ensure that the steam lock on the handle is deactivated (6).

6.4 Press and hold the steam trigger on the handle of the steam hose (6) and steam the surface thoroughly to dissolve the dirt.

6.5 **For the Pro 95\_Turbo Flexi model** go back over the surface with the window cleaner to remove the dirt, without steaming. For a more abrasive action and more effective dirt removal, the bristles supplied with the window-cleaning accessory can be used

**For the Pro 85\_Flexi model** use the manual window-cleaning accessory to remove the dirt dissolved by the steam.

6.6 We recommend keeping a microfibre cloth close at hand (Vaporetto Microfibre Cloths for manual use PAEU0231) to complete the cleaning operations and dry the dirt dissolved by steam.

## 7. CLEANING UPHOLSTERY

### (mattresses, sofas, car interiors, etc.)

**WARNING:** Before cleaning leather or fabrics with steam, consult the manufacturer's instructions and always carry out a test on a hidden area or on a sample of the material. Allow the steamed part to dry to make sure that no changes in colour or deformations have occurred.

- 7.1 Make sure that section 1 has been followed and connect the accessories as indicated in section 2.  
 7.2 Connect the small brush to the hose.  
 7.3 Attach the socket to the small brush.  
 7.4 Adjust the intensity of the steam by turning the adjustment knob (5); for this type of surface we recommend **Minimum level** of steam.  
 7.5 Ensure that the steam lock on the handle is deactivated (6).  
 7.6 Press and hold the steam trigger on the handle of the steam hose (6) and pass over the surface.

## 8. CLEANING FURNITURE AND DELICATE SURFACES

**WARNING:** Do not direct the steam jet directly onto surfaces. Before cleaning the surface, always do a test on a hidden area and see how it reacts to the application of steam.

- 8.1 Ensure that section 1 has been followed.  
 8.2 Adjust the intensity of the steam by turning the adjustment knob (5); for this type of surface we recommend **Minimum level** of steam.  
 8.3 Ensure that the steam lock on the handle is deactivated (6).  
 8.4 Press and hold the steam lever on the handle of the steam hose (6) and direct the jet onto a cloth (Vaporetto Microfibre Cloths for manual use PAEU0231).  
 8.5 Use the cloth previously steamed to clean the surface, avoiding prolonged use on the same spot.

## 9. CLEANING BATHROOM FIXTURES, GROUTING AND KITCHEN WORKTOPS

- 9.1 Make sure that section 1 has been followed and connect the accessories as indicated in section 2.  
 9.2 Connect the concentrator accessory, equipped with bristly round brush, to the hose. **For the Pro 95\_Turbo Flexi model** the steam lance can be attached to the concentrator accessory. This is recommended for reaching the most difficult-to-reach areas, ideal for cleaning radiators, door and window frames, bathrooms and shutters.

To connect the steam lance to the steam concentrator, simply screw it on. The same operation can be carried out for the brush, which can in turn be screwed onto the steam concentrator and onto the steam lance.

The different coloured brushes allow for a different colour for each surface or environment.

9.3 Adjust the intensity of the steam by turning the adjustment knob (5); for this type of surface we recommend **Maximum level** of steam.

- 9.4 Ensure that the steam lock on the handle is deactivated (6).  
 9.5 Press and hold the steam trigger on the steam hose (6) to start cleaning.

## 10. OTHER GENERAL USES

**WARNING:** Before cleaning the surface, always do a test on a hidden area and see how it reacts to the application of steam.

### 10.1 BRIGHTENING UP CURTAINS AND DRAPES

Mites and dust can be removed from curtains and drapes by steaming the fabric directly from the handle. The steam is able to remove odours and brighten up colours, allowing the fabric to be washed less frequently.  
 For this surface, set the steam to the **minimum level**.

### 10.2 REMOVING STAINS FROM CARPETS AND UPHOLSTERY



**WARNING:** Steam.  
 Risk of scalding!


Connect the concentrator accessory without the bristly round brush; direct the steam directly onto the stain with the greatest angle possible (never vertically to the surface to be cleaned) and place a cloth beyond the stain to collect the dirt that has been "blown" away by the steam pressure.

For this surface, set the steam to the **minimum level**.

### 10.3 TAKING CARE OF PLANTS AND HUMIDIFYING ROOMS

To care for your house plants, remove the dust from the leaves by steaming them directly from the handle. Adjust the steam to the **minimum level** and vacuum at a distance of 50 cm. Plants breathe better and will be cleaner and brighter. Furthermore, you can also use the steam to refresh spaces, especially those frequented by smokers.

## 11. OUT OF WATER

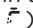The lack of water in the boiler is identified by the out-of-water light coming on (  ) (17).

To resume use, simply:

- switch off and disconnect the Vaporetto.
- fill the tank as described in Section 1.
- connect and turn the Vaporetto back on.

**WARNING:** This operation must always be done after disconnecting the appliance from the mains.

## 12. TURBO FUNCTION

### For the PRO 95\_TURBO FLEXI model only

When the TURBO function is active, the appliance adjusts to the ideal steam pressure to remove the most stubborn dirt.

To activate the function, press the Turbo (18) button and wait for the “steam ready” indicator light (☼) to turn off.

To deactivate the Turbo function, press the Turbo button again.

## 13. GENERAL MAINTENANCE


Before carrying out any maintenance on the device, always unplug it from the power mains making sure that the product has cooled down before proceeding.

To clean the outside of the appliance, use only a damp cloth and tap water. All accessories can be cleaned using running water, ensuring they are completely dry before the next use.

Do not use detergents of any type.

After using the brushes, we recommend letting the bristles cool down in their natural position, in order to avoid any deformation.

**Periodically check the status of the coloured seal located in the built-in socket and the connection seals of the extension tubes and the steam hose. If necessary, replace with the corresponding spare part, as described below.**

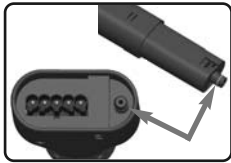

- Remove the damaged seal.
- Insert the new seal, attaching it on the steam nozzle and pushing it into place.
- Lubricate the gasket with silicone grease or Vaseline, or alternatively with small quantities of vegetable oils.

## 14. KALSTOP

Kalstop is the anti-limescale product for appliances with boiler for ironing and steam cleaning.

Regular use of Kalstop, every time the tank is filled with water:

- Extends the life of the appliance.
- Allows emission of a “drier” steam
- Prevents limescale build up.
- Protects the walls of the boiler.
- Contributes to saving energy.

### HOW TO USE KALSTOP

14.1 Dilute one phial in 5 litres of water before putting it in the tank.

14.2 Fill the tank as described in section 1.

14.3 Proceed with the normal cleaning operations.

Kalstop (PAEU0094) is sold in packages of 20 phials at household appliance stores, at Polti authorized service centres and at [www.polti.com](http://www.polti.com).

## 15. STORAGE

15.1 Turn off the appliance and disconnect from the mains electricity.

15.2 Wait for the appliance to cool down completely before storing it.

15.3 The hoses, brush and flexible hose can be housed on the body of the appliance, sliding the hook on the floor brush into the parking system on the appliance (19).

15.4 The extension tubes can be returned to in the special tube holder compartment (20).

15.5 The small accessories can be placed in the accessories compartment. To open the compartment, press gently on the word “PUSH” (near the bottom of the lid), and open it (21).

## 16. TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance does not turn on.	No power.  Boiler switched off.	Check that the appliance has been connected to the mains, as indicated in Section 1.  Turn on the boiler as indicated in Section 1.
The appliance is pressurised but little steam comes out.	No water in the boiler.  Flexible hose not inserted correctly. (only for the PRO 95_TURBO FLEXI model).  Steam adjustment dial set to the minimum.  Steam lock activated.	Fill the boiler as indicated in Section 1.  Correctly insert the flexible hose, as indicated in Section 1.  Adjust the position of the dial for the desired increase.  Release the steam lock on the steam hose handle.
Steam is dispensed mixed with drops of water.	The steam hoses are cold.	Direct the steam jet onto a cloth to heat up the tubes.
Loss of steam or drops of water between the connection of the accessories.	The seals are damaged.	Replace the seals, as indicated in Section 13.
Accessories are difficult to assemble.	The seals produce friction.  The locking button is not in the correct position.	Lubricate the seals with silicone grease or Vaseline, or alternatively with a small amount of vegetable oil.  Turn the locking button to the correct position as indicated in Section 2.
The appliance releases too much water on the floor	Steam adjustment dial set to the maximum.	Reduce the quantity of steam to the minimum. If necessary, momentarily stop the disbursement of steam, while continuing to rub the surface.
Should the problems persist, contact an Authorised Polti Service Centre (see <a href="http://www.polti.com">www.polti.com</a> for the up-to-date list) or Customer Services.		

## WARRANTY

This appliance is for domestic use only and is guaranteed for two years from the date of purchase against any defects present at the time the goods are handed over; the date of purchase must be proven via a proof of purchase document valid for tax purposes and issued by the seller.

For repairs, the appliance must be accompanied by proof of purchase.

This warranty does not affect the consumer rights deriving from European Directive 99/44/EC as regards some aspects of sale and warranty of consumer goods, rights which the consumer should uphold against the seller.

This warranty is valid in the countries which adhere to European Directive 99/44/EC. For other countries, local regulations on warranties apply.

### WHAT THE WARRANTY COVERS

During the warranty period, Polti guarantees free repair of a product with a manufacturing or factory defect and, therefore, the consumer is not liable to pay for any work or materials.

In case of irreparable defects, Polti may replace the product free of charge.

To benefit from the warranty, the customer should visit a Polti Authorised Service Centre or contact Customer Services with proof of purchase from the seller valid for tax purposes and bearing the date of purchase of the product. Without proof of purchase and the relevant date of purchase, the work will be charged for. Store the proof of purchase document safely for the whole duration of the warranty period.

### WHAT THE WARRANTY DOES NOT COVER

- Any fault or damage not deriving from a manufacturing defect.
- Any fault due to improper use or use other than that indicated in the instruction booklet, an integral part of the product sales contract.
- Any defect resulting from *force majeure* (fires, short circuits) or caused by third parties (tampering).
- Damage caused by the use of non-original Polti parts, and repairs or modifications performed by staff or service centres not authorised by Polti.
- Damage caused by the consumer.
- Parts (filter, brush, hose, battery, etc.) damaged by use (consumable goods) or normal wear and tear.
- Any damage caused by limescale.
- Defects resulting from lack of maintenance/cleaning according to the manufacturer's instructions.
- Assembly of non-original Polti accessories or those that have been modified or which are not suitable for the appliance.

Inappropriate use and/or use not compliant with the instructions for use and any other warnings or indications contained in this manual invalidates the warranty.

Polti accepts no responsibility for any direct or indirect damage to people, objects or animals caused by non-compliance with the instructions indicated in this instruction booklet, regarding warnings for use and product maintenance.

**To see the up-to-date list of the Polti Authorised Service Centres, visit the website [www.polti.com](http://www.polti.com).**



**POLTI**<sup>®</sup>

NATURAL HOME FEELING

**Vaporella**<sup>®</sup>

**Vaporetto**<sup>®</sup>

LECOASPIRA

**Vaporetto**<sup>®</sup>

**Forzaspira**<sup>®</sup>

**UNICO** 

[www.politi.com](http://www.politi.com)





REGISTRA IL TUO PRODOTTO  
REGISTER YOUR PRODUCT  
ENREGISTREZ VOTRE PRODUIT  
REGISTRA TU PRODUCTO  
GERÄTREGISTRIERUNG  
REGISTE O SEU PRODUTO

SN:



-----

## CALL CENTER

ITALIA SERVIZIO CLIENTI	848 800 806
FRANCE SERVICE CLIENTS	04 786 642 12
ESPAÑA SERVICIO AL CLIENTE	902 351 227
PORTUGAL SERVIÇO AO CLIENTE	707 780 274
UK CUSTOMER CARE	0161 813 2765
DEUTSCHLAND KUNDENDIENST	03222 109 472 9

OTHER COUNTRIES, PLEASE VISIT [WWW.POLTI.COM](http://WWW.POLTI.COM)



# POLTI®

NATURAL HOME FEELING

POLTI S.p.A. - Via Ferloni, 83  
22070 Bulgarograsso (CO) - Italy  
[www.polti.com](http://www.polti.com)

Follow us:

